



KB25

KajoButton
ø 25 mm

KB50

KajoButton
ø 50 mm

KB100

KajoButton
ø 100 mm

KART-27

KajoButton RF
EasyWave

KART-TX4

KajoButton RF
Tunstall

KSB80

Kajo Softbutton

KSB80W

SoftButton RF
EasyWave

KSB80C

Cover for
Softbutton

KPIPE25

Mounting adapter
for KB25

KBASE

KajoBase for
KajoButton

KBASEDUO

KajoBase Duo for
two KajoButtons

Cable length

25 cm

77 cm

 
150 cm

 
Activation force

100 g

150 g

250 g

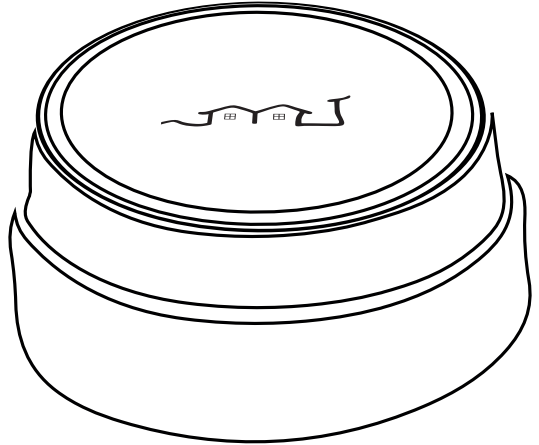

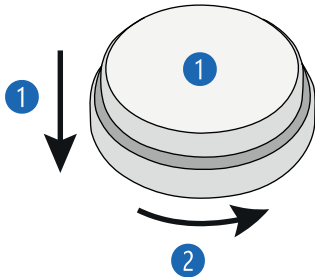


REPLACING THE BATTERY ON WIRELESS SWITCHES

To open the switch, first push the lid down and then rotate counter-clockwise while pushing down. When unlocked, the lid comes off easily, without forcing.

Take out the transmitter and replace the battery. EasyWave switches use the 3V type CR2032 battery, Tunstall TX-transmitters use 3V type CR2450.


An instructional video on how to change the battery can be found on the Kajo Apuvälineet YouTube-channel.

 After replacing the battery, reinsert the transmitter into the base with the battery side facing downwards. Align the counterparts in the casing and in the transmitter (❶ for Easywave transmitters). The transmitter should sit in nicely. When reinstalling the top, note the correct position of the top part in relation to the base (❶ for all switches).

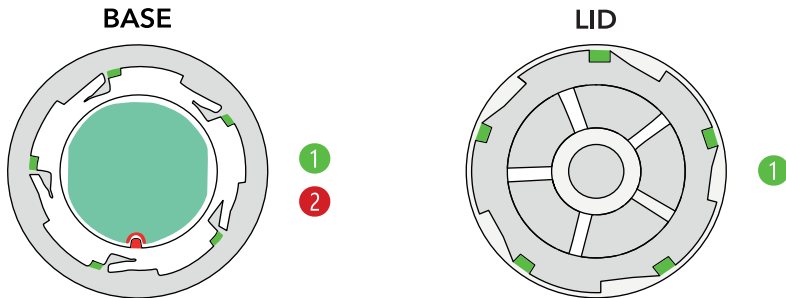

MAINTENANCE INSTRUCTIONS

 - Do not open or disassemble the wired switch models.
- Do not pull the cord.
- Keep the cord untangled.
- Do not wrap the cord around the switch.
- Do not expose the switches to extreme conditions like heat, cold or water.

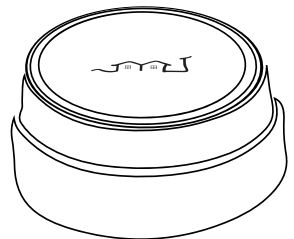

Designed and manufactured in Finland by

Kajo Apuvälineet Oy
Insinöörintie 30 A 203
33720 Tampere, Finland
www.kajo.fi | info@kajo.fi

